


IN-DASH INSTALLATION KIT FOR 2003-06 HONDA ELEMENT/ 2007-08 HONDA ELEMENT LX (LX MODEL ONLY)

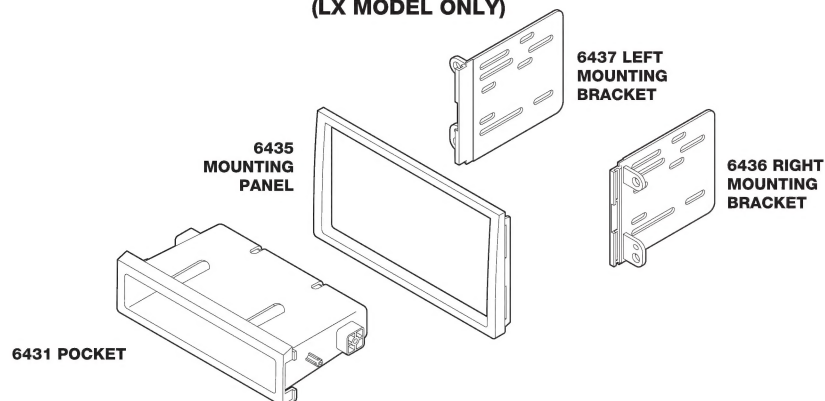

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2003-06 Honda Element vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION:

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.



IMPORTANT!

*Do Not Return Product
to the Retailer!*

IF YOU NEED ASSISTANCE OR REPLACEMENT PARTS

Call us FIRST at ...

1-800-621-3695 ext 3

Toll Free, No-Charge tech support

- FRIENDLY CUSTOMER SERVICE TECHNICIANS
- YOU WON'T BE ON HOLD LONGER THAN 5 MINUTES

OUR HOURS ARE:

Monday - Friday 8:00 a.m. to 5:30 p.m. (PST)
Saturday 8:00 a.m. to 2:00 p.m. (PST)



FACTORY WIRING CODES

For Factory Wiring Codes go to: www.scosche-cars.com

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

HA08B


1998-up Honda power/speaker connector



MOUNTING THE STEREO


ISO DIN MOUNT

1. Snap the 6436 and 6437 brackets to the 6435 kit panel.
2. Align the 6431 pocket to the lower edge of the panel. Secure the pocket to the 6436 & 6437 mounting brackets with the two (2) supplied screws in the installation kit.
3. Mount stereo to brackets with the stereo's supplied screws.

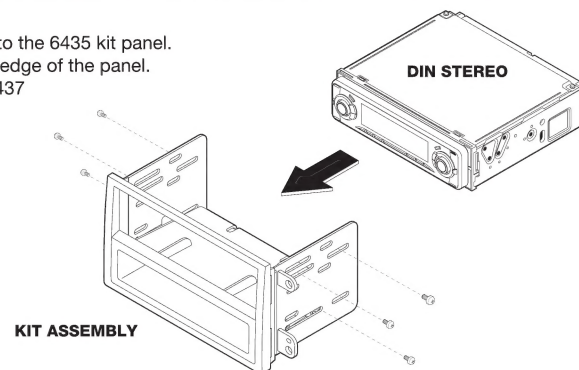

DOUBLE DIN MOUNT

1. Snap the 6436 and 6437 brackets to the 6435 kit panel.
2. Align, position and bolt the aftermarket double DIN-ISO head unit to the 6436 & 6437 mounting brackets. Use the hardware supplied with the aftermarket double DIN-ISO head unit to secure the mounting brackets to the aftermarket stereo.

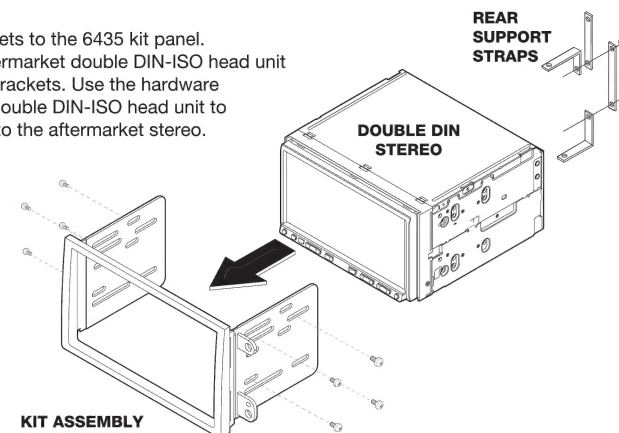

NOTE:
REAR SUPPORTING THE STEREO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY. REAR SUPPORT AVAILABLE SEPARATELY.

RADIO REMOVAL

2003-06 HONDA ELEMENT 2007-UP HONDA ELEMENT LX

1. Using panel removal tool, pry loose panel from around radio, vents, and shifter. Unplug and remove.
2. Remove (4) Phillips head screws from radio brackets. Unplug and remove.

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this HA1701B kit for 2003-06 Honda Element vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.